

User's Instruction

NAIL FILING MACHINE EB1010

NAIL FILING MACHINE EB1010 is an idea filing tool set for nail decoration. It has forward and reverse dual direction-rotations for left- or right-handed nail technicians, from 0 to 30000 rpm adjustable speed, quiet & smooth operation handpiece with a flexible extension, which is convenient to use for finishing the nails.

Technical specifications:

Voltage: 220-240V / 50-60Hz

Power: 35W

Collect: 2.35mm (3/32')

Rated Speed: 0 rpm min.

30000 rpm max.

One set including: Main Controller, Handpiece with flex, Handpiece Table Rest, Foot Pedal.

How to Use

1. Insert the handpiece flex plug into the power output socket on the main control machine.
2. Loose the chuck by left-turning the Middle part on the hand-piece and insert/change the Bit and tighten the chuck by right-turning the Middle part on the hand-piece
3. Plug the controller into appropriate power source.
4. Choose the mode "FORWARD" or "REVERSE" direction, and then switch to "On" position to start the machine.
5. Select the speed level that you need by sliding the speed control handle.

Precautions:

1. Please use the correct power source voltage shown on the controller front panel.
2. Please start to use after the collet is well fixed.
3. Please stop the machine once any abnormal movement/noise is noticed at work.
4. Please adjust the speed gradually, not abruptly.
5. Please do not touch any rotating part while the machine is working.
7. When changing the direction, please stop the machine first.
8. Please do not place a cloth or anything else on the ventilation slides of the controller, and keep the dust away from it too.
9. If the cable were broken to avoid the danger, it must be replaced by the manufacturer or service department or other technicians.
10. This appliance is not intend for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction use of the appliance by a person responsible for their safety.
11. Children should be supervised to ensure that they do not play with the appliance. Before using, ensure the voltage of your power supply is the same as that indicated in the instruction manual, only connect appliance to alternating current to a correctly installed earthed socket, cord and plug must be completely dry.